
Dehumidifier

Operating Instructions

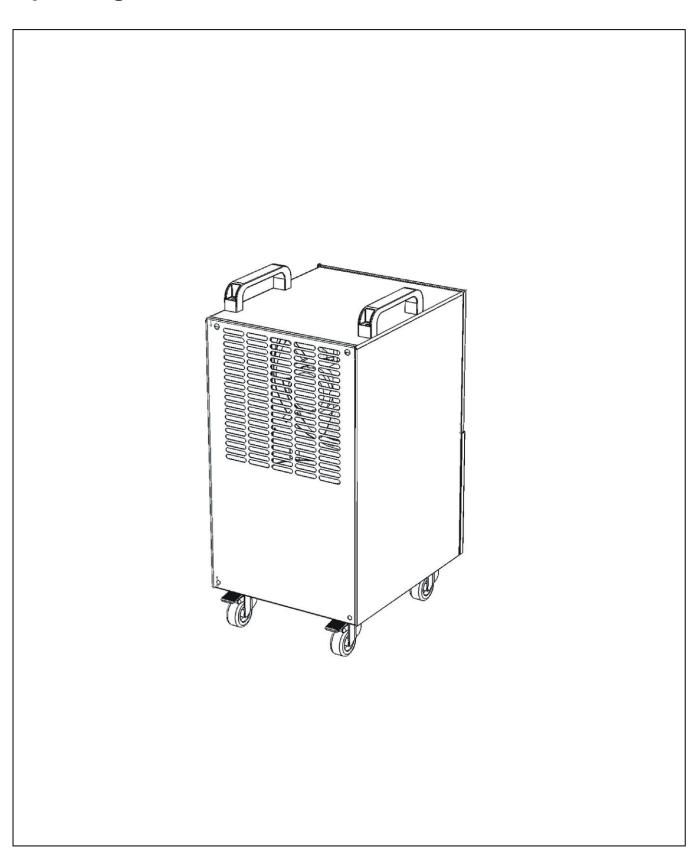

IMPORTANT


- Before using this appliance for the first time, read the instruction manual carefully and keep it safe for future reference. This will allow you to obtain the best results from your machine and to use it safely.
- Before using the appliance, check that the domestic power supply corresponds to that indicated on the appliance. Only switch on the machine if the plug and fittings have been applied correctly.
- The electrical safety of this appliance can only be guaranteed if the appliance is earthed, as required by current electrical safety regulations.
 - The manufacturer cannot be held responsible for damage arising from the machine not being earthed. If in doubt regarding this point, consult a qualified electrician.
- If the plug and the socket do not match,
 Substitute the plug with a suitable replacement. A qualified electrician must carry this out. If a fixed electrical connection is required, it must be carried out by authorised personnel and in accordance with national laws of electrical installation.
- The use of adapters, double or triple plugs and/or extensions is not advised.
 When these must be used, it is important that they meet current safety standards, and care must be taken to ensure that the power limit indicated on the adapter is not exceeded.
- After removing packing materials, check that the appliance is in perfect working order. In you are in any doubt, contact your nearest service personnel.
- Packaging materials (plastic bags, EPS etc.) should not be left within reach of children, as they are potentially dangerous.
- This appliance is intended only for domestic usage. Any other use to which it is put must be considered unsuitable and therefore dangerous.
- If the appliance malfunctions, switch it off and do not try to fix it. If the appliance needs repair, please take it to a manufacturer authorised service centre, requesting the use of original parts if needed. If original parts are not used, the safety of the appliance can no longer be ensured.
- The user must not attempt to change the cable. If it is damaged or needs to be changed, this must be carried
 out exclusively by a manufacturer authorised service centre. Do not use the appliance if the cable or plug is
 damaged.
- The manufacturer cannot be held responsible for damage arising from inappropriate or unsuitable usage or from repairs carried out by unqualified personnel.

The use of any electrical appliance demands that a few fundamental rules be followed.

PLEASE NOTE:

- Warning: This appliance must not be used in close proximity to baths, showers or dishwashers.
- Do not install the appliance near sources of heat or where the air possibly contains gases or sulphurous oils, nor must it be used in areas exposed to radiation.
- Do not allow children to handle the appliance.
- Alteration or modification of the appliance's functional characteristics may be dangerous.
- Unplug the appliance when you have finished using it, as well as before any maintenance or cleaning operation.
- Never pull on the flex to unplug the appliance.
- Do not place hot or heavy objects on top of the appliance.
- Warning: This appliance must be kept in an upright position. It must also be kept upright when being transported. The water container must be emptied before the appliance is transported. After transportation, wait for at least an hour before switching the appliance on.


CONTROL PANEL

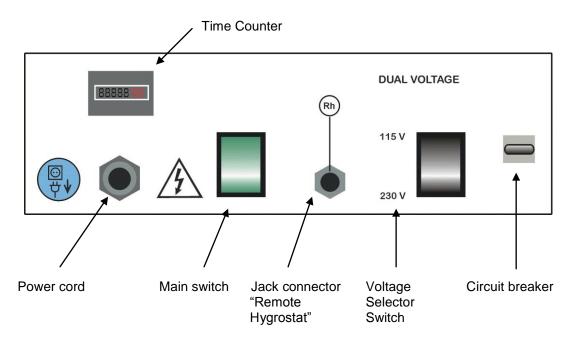

TECHNICAL DATA

| MODEL | T20 dual voltage | | | |
|--|-------------------------|--|--|--|
| Rated voltage | 115/230 VAC - 50 Hz | | | |
| Rated power Input | 558 W | | | |
| Rated current | 6.2/3,1 A | | | |
| Potential for dehumidifying in 24 H (26.7°C / 80%HR) 18 Litres | | | | |
| Dehumidified air | 160m³/h | | | |
| Refrigeration agent | R134a | | | |
| Area of dehumidification | 160m² | | | |
| Defrost | Yes | | | |
| Dimensions Width x Height x Depth | 300 x 620 x 370 mm | | | |
| Weight (net) | 27 kg | | | |
| Operating limits: Humidity Temperature | 30% - 90% 5°C – 30°C | | | |

Circuit diagram

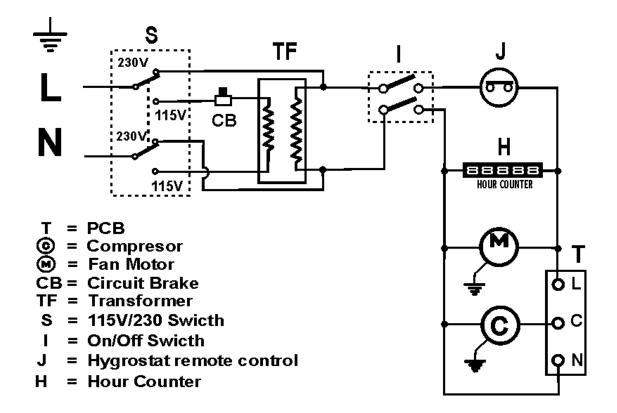

IMPORTANT NOTES

- The dehumidifier must be placed on a hard, flat, uniform surface.
- To ensure that the appliance functions correctly, a space of at least 50cm must be left all around it. The air entry and exit panels must not be obstructed.
- Close doors and windows of the room in which the appliance is to be operated.
- Clean the filter once a week. Do not expose it to direct sunlight.

OPERATION

To ensure correct usage, a space of at least 50cm must be left clear all around the appliance.

- 1. Switch the appliance on: the green light on the control panel should light up.
- 2. Check if the voltage selector is turned to the correct voltage you have on power source. The circuit breaker must be turned ON otherwise the appliance doesn't work.
- 3. If the remote hygrostat is not fitted, the appliance starts running automatically. If it is fitted, switch the hygrostat to the "Cont" position for continuous use. When the relative air humidity has fallen to the desired level, turn the hygrostat slowly in the opposite direction, until the appliance comes to a stop.

 This ensures automatic regulation of air humidity.

Ideal environmental conditions are around 50% - 60% of relative humidity.

DEFROST OPERATION

If the ambient temperature of the room in witch the appliance is conditioning, falls below 12°C, ice will be formed on the evaporator. Over a period of time this builds up of ice and effect the efficiency of the appliance. Therefore it is fitted with a defrost device.

DUAL VOLTAGE

This appliance is fitted with a transformer which will allow the unit to operate on either 110 or 230 volts, 50Hz power supply. It is fitted with a circuit break that protects any wrong selection of power supply. The electrical components are rated for 230VAC. The voltage selector switch can be found on the panel of the unit at the rear.

CLEANING AND MAINTENANCE

- Before carrying out any cleaning or maintenance operation, the appliance must be disconnected.
- Do not clean the appliance directly under a source of running water.
- Clean the outside of the appliance with a slightly damp cloth, and dry it with a dry cloth.
- Do not use petrol, alcohol or solvents to clean the appliance.
- Do not spray the appliance with insecticides or similar products.

Cleaning the filter

The filter must be cleaned once a week.

To remove the filter, pull it upwards. Use a vacuum cleaner to remove any dust on the filter. If the filter is very dirty, it may be washed in warm water, being careful to ensure that the water temperature is below 40°C. Leave the filter to dry completely before replacing it in the appliance.


TROUBLE SHOOTING

The following guide will explain some of the possible causes of appliance malfunction, which must be checked before calling the authorised service centre. If the appliance still does not work after trying out the suggestions given here, we ask you to contact the authorised service centre.

Do not attempt any other type of test or examination of the appliance. Do not attempt to change or repair the electrical components.

| Problem | Causes | Solution | | |
|--|---|--|--|--|
| The appliance does not work. | The appliance is not connected to a power source. The remote hygrostat (if in use) is in the "Min" position. The voltage selector is not positioned according to the power source voltage. The circuit breaker is turned OFF | Connect the appliance to a power source. Adjust the hygrostat to the desired position. Select the correct voltage Turn ON the circuit breaker | | |
| The appliance does not dehumidify | The air filter is dirty. | Clean the air filter. | | |
| The appliance works but does not reduce humidity | The room is too big.There are two many sources of humidity. | | | |

EXPLODED VIEW

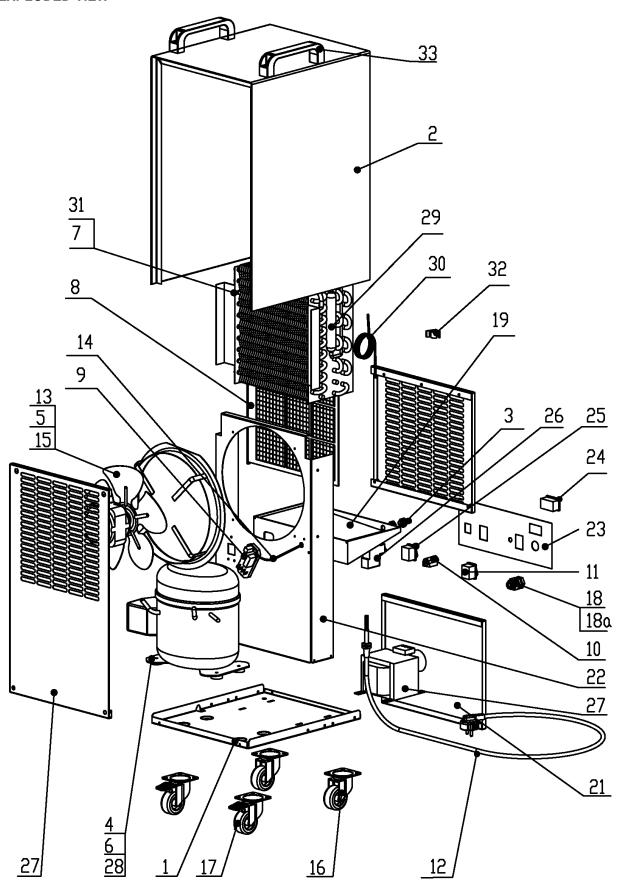

SPARE PARTS

| | Beschreibung | Descr | iption | T 20 Dual |
|-----|--------------------------|-------------------------------|---|-----------|
| 1 | Unterteil | Base | Socle | 047416 |
| 2 | Oberteil | Cover | Capot | 047417 |
| 4 | Kühlaggregat kpl. | Complete refrigeration unit | Unité frigorifique complète | 047418 |
| 5 | Ventilatormotor komplett | Fan motor complete | Ventilateur motoeur | 047419 |
| 6 | Anlaufkondensator 47μF | Starting capacitor microF | Condensateur de lancement 47µF démarrage | 047420 |
| 7 | Verdampfer kpl. | Evaporator/Condenser complete | Evaporateur complète | 047421 |
| 8 | Ansaugfilter Permacool | Air filter | Filtre à air Permacool | 047422 |
| 9 | Leiterplatte (T20) | PC board T20 | Platine (T20) | 047423 |
| 10 | Hygrostatsockel | Socket for hygrostat | Socle pour hygrostat | 046063 |
| 11 | Hauptschalter | Main Switch | Interrupteur principal | 046133 |
| 12 | Netzkabel | Power cord | Câble d'alimentation | 047442 |
| 13 | Ventilatormotor | Fan motor | Ventilateur motoeur | 046055 |
| 14 | Verdampferfühler | Temperature sensor evaporator | Sonde de température évaporateur | 047424 |
| 15 | Ventilatorflügel | Fan blade | Hélice | 047425 |
| 16 | Rad ohne Bremse | Wheel without brake | Roue sans frein | 047426 |
| 17 | Rad mit Bremse | Wheel with brake | Roue avec frein | 047427 |
| 18 | Verschraubung | Pipe union | Hygrostat avec câble d'amenée et adapteur | 047428 |
| 18a | Gegenmutter | Lock-nut | Raccord | 046079 |
| 19 | Wassertank | Water collector | Réservoir | 047429 |
| 20 | Gitter Hinten | Rear grid | Grille arrière | 047430 |
| 21 | Rückwand | Rear panel | Paroi arrière | 047431 |
| 22 | Zwischenwand | Intermediate panel | Paroi intermédiaire | 047432 |
| 23 | Aufkleber Platine | Control panel sticker | Autocollant Platine | 047433 |
| 24 | Betriebsstundenzähler | Working hour meter | Compteur d'heures | 046064 |
| 25 | Spannungswahlschalter | Voltage switch | Commutateur voltage | 047435 |
| 26 | Sicherung = T20 Dual | Circuit breaker | Fusible | 047436 |
| 27 | Transformator = T20 Dual | Transformer | Transformateur | 047437 |
| 28 | Kompressor | Compressor | Compresseur | 047438 |
| 29 | Trockenfilter | Filter-drier | Filtre-déshydrateur | 047439 |
| 30 | Drosselorgan kpl. | Metering coil | Ralentisseur | 047440 |
| 31 | Verdampfer | Evaporator/Condenser | Evaporateur | 047444 |
| 32 | Schlauchhalter | Hose holder | Support flexible | 046084 |
| 33 | Griff | Handle | Poignée | 047441 |
| | Schalterknopf ** | Voltage switch knob ** | Bouton commutateur voltage ** | 047434 |
| ** | Ohne Abbildung | Without picture | Sans dessin | |
| | | | | |

| | | | |
|------|------|------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| T20 dual voltage | |
|------------------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| | | | |
|------|------|------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

EG – Konformitätserklärung

EG – Declaration of conformity

EG - Déclaration de conformité

Der Hersteller

The manufacturer / Le fabricant

Kroll GmbH

Pfarrgartenstraße 46, D-71737 Kirchberg

Tel. 07144/830-0

Dokumentationsbevollmächtigter Authorized person for documentation Personne authorisée pour la documentation

Markus Preuss

erklärt hiermit, dass folgende Produkte / Herewith declares that the following products Explique par ce document que les produits suivants

Produktbezeichnung

Description / Désignation du produit

Luftentfeuchter

Dehumidifier / Déshumdificateur

Typenbezeichnung / Type / Type

T20 Dual voltage

allen einschlägigen Bestimmungen der

folgenden Richtlinien entspricht

correspond to all relevant regulations of

the following guidelines

Correspondent à tous les spécifications des directives suivantes

2006/95/EG Elektrische Betriebsmittel zur

Verwendung innerhalb bestimmter

Spannungsgrenzen

Electrical devices for use within

certain voltage limits

Matériel électrique pour utilisation dans certaines limites de voltage

Folgende harmonisierte Normen wurden EN 60335-2-30; EN 60335-2-40

angewandt

The following harmonized norms have

been applied

Les normes harmonisées suivantes ont

été appliquées

EN 61000-3-2; EN 61000-3-3

EN 62233

EN 55014-1; EN 55014-2

Kirchberg, 7.06.2011

Alfred Schmid

Geschäftsführer / Director / Directeur

Marin