


Recommend flue kit configuration for a waste oil boiler

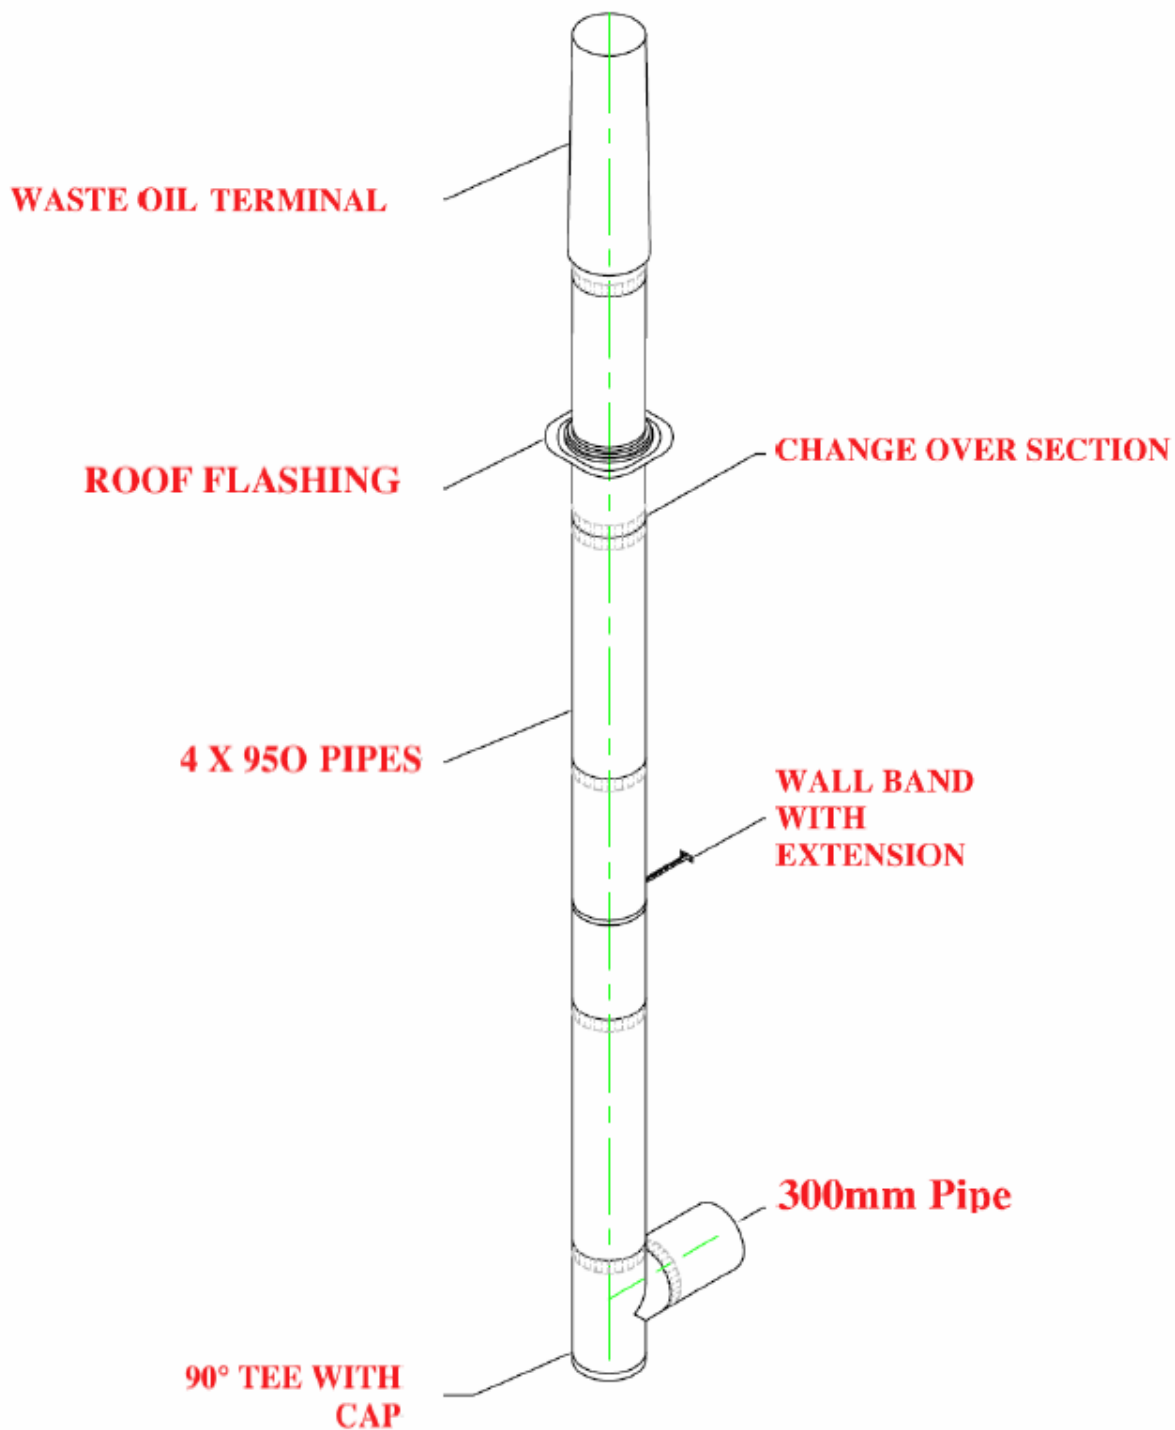

- Rain caps are not permitted with used oil fired heaters. The terminal pipe is designed to deflect rainwater down the outer section
- Flue gases cannot rise in a horizontal stack and bends also restrict their movement. If flue bends are used then we recommend 45° bends instead of 90° and a gradual sloping stack